


# Product Introduction

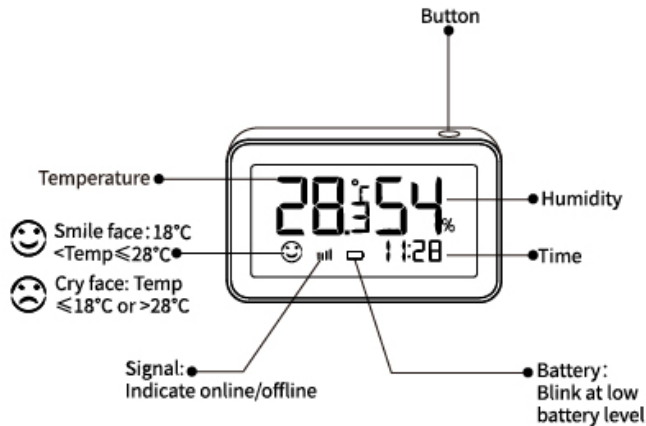

## Quick Setup

### Quick Setup

**NOTE:** This product support Tuya platform or EWELINK platform. Please download **“Smart Life”** (TUYA platform) or **“eWeLink”** (EWELINK platform) in APP store / Google play, also can scan the below QR code to install official APP




**Smart Life**



**eWeLink**

**1. Insert the battery into the battery compartment (please note the battery positive and negative)**

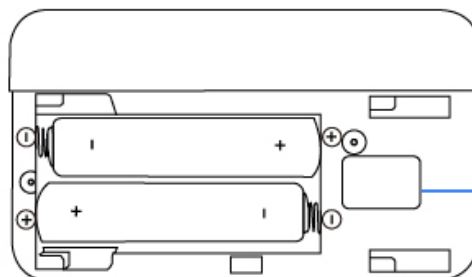

Insert two AAA batteries

### 2. Device pairing

#### a) For Wi-Fi version

Enable Bluetooth of your mobile phone, then enter into Smartlife APP, click **“Add Device”**, this device will be scanned, follow the in-App instruction to connect the device to your network.

#### b) For Zigbee/Bluetooth version

Make sure the gateway has been added first, then press the button for 5 seconds to see the LED blinks.

enter gateway homepage and click "Search new device" or "Add Devices" and follow the in-app instructions to connect the device to your gateway.

### 3.Setting in APP.


After pairing successfully,click "Set" at the device panel to enter the device setting page. There are more option for adjusting the device, such as below:

#### 1).The temperature unit setting




Note:for the unit convert,it also can be converted by double-click the button.

#### 2)The temperature update sensitivity setting

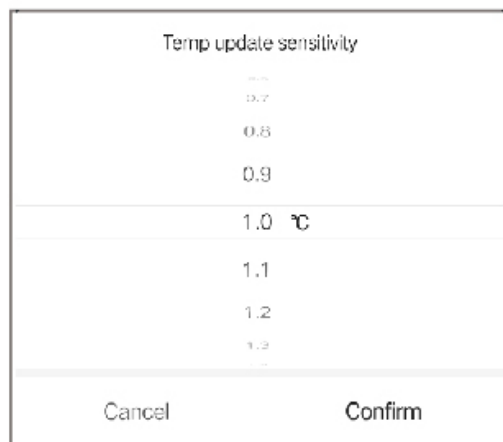

#### 3)Limits setting of Low temperature alarm and High temperature alarm.



| Set minitemp | Set maxtemp |
|--------------|-------------|
| 10.3         | 39.7        |
| -10.2        | 39.8        |
| -10.1        | 39.9        |
| -10.0 °C     | 40.0 °C     |
| -9.9         | 40.1        |
| -9.8         | 40.2        |
| -9.7         | 40.3        |
| -9.6         | 40.4        |

Cancel | Confirm

#### 4) Enable/Disable alarm setting

